

「おもいでケータイ再起動」充電対象機種

対象機種は以下の通りです。

※このほか、携帯電話の電池パックが取り外し可能なりチウム電池であれば、上記キャリア・機種以外でも充電できることがあります。
充電可否を確認しますので、よろしければ会場にお持ち込みください。

キャリア	種別	製品型番
au	共通ACアダプタ02対応機種	GRATINA2, MARVERA2, MARVERA, GRATINA, あんしんGPS, mamorino3, PT003, K011, K012, URBANO PROGRESSO, F001, URBANO AFFARE, E10K, E09F, S007, T007, CA007, K009, T008, K010, mamorino2, G11, PT002, T006, S006, K008, SH011, K007, CA006, G'zOne TYPE-X, SH010, S005, X-RAY, T005, URBANO MOND, SH009, K006, PT001, LIGHT POOL, CA005, beskey, SH007, T004, S003, S004, SA002, SH008, K005, SH006, E08T, lotta, mamorino, K004, URBANO BARONE, SH005, PRISMOID, BRAVIA(R) Phone U1, SH004, E07K, CA004, CA003, SA001, SH003, S002, T003, PLY, K003, 私の犬のリンリン, ドッツ・オブセッション, 水玉で幸福いっぱい, 宇宙へ行くときのハンドバッグ, Mobile Hi-Vision CAM Wooo, E06SH, misora, G'zOne CA002, Sportio water beat, K002, SH002, T002, biblio, E05SH, G9, CA001, H001, K001, P001, S001, SH001, T001, Walkman(R) Phone, Premier3, NS01, NS02, Walkman(R) Phone, Xmini, W64SH, W65T, W63CA, W63H, W64S, W62P, W65K, W64T, W64SA, W64K, W63K, Sportio, W63SA, re, URBANO, W62PT, W62H, W62SH, G'zOne W62CA, W62K, W62T, W62S, W62SA, W61SA, W61S, W61T, W61P, W61PT, W61H, W61SH, W61CA, W61K, W56T, INFOBAR 2, W55T, W54SA, W54S, W54T, W53S, W53H, W53K, W53SA, W53T, W53CA, W52CA, W52P, W52H, W52S, W52SA, W52SH, W52T, MEDIA SKIN, W51P, W51T, W51SH, W51SA, W51S, W51K, W51H, W51CA, W47T, DRAPE, W45T, W44TIII, W44TII, W44T, W44S, W44KII, W44K, W43T, W43SA, W43S, W43K, W43HII, W43H, W43CA, neon, W42SA, W42S, W42K, W42H, G'zOne W42CA, W41T, W41SH, W41SA, W41S, W41K, W41H, W41CA, W33SAII, W33SA, W32T, W32S, W32H, W31T, W31S, W31CA, A5529T, A5528K, A5526K, A5525SA, Sweets cute, A5523T, A5522SA, A5521K, A5520SAII, A5520SA, Sweets pure, A5518SA, A5515K, G'zOne TYPE-R A5513CA, A5512CA, A5511T, A1407PT, A1406PT, A1405PT, E03CA, E02SA
	共通ACアダプタ03対応機種	AQUOS K SHF33, mamorino Watch ZTF31, GRATINA 4G, AQUOS K SHF32, GRATINA2, MARVERA2, MARVERA, GRATINA, mamorino3, PT003, URBANO PROGRESSO, F001
	その他	A1404S, A5509T, PENCK (W31H), Sweets (A5510SA), W31K, W31SA, A1304T II, A1305SA, A1402S, A1402S II, A1403K, A5405SA, A5406CA, A5407CA, A5502K, A5504T, A5505SA, A5506T, A5507SA, talby (A5508SA), W21CA, W21H, W21K, W21S, W21SA, W21T, W22H, W22SA, A1301S, A1302SA, A1303SA, A1304T, A1401K, A5303H, A5303H II, A5304T, A5305K, A5306ST, A5401CA, A5401CA II, A5402S, A5403CA, A5404S, A5501T, A5503SA, INFOBAR (A5307ST), W11H, W11K, A1011ST, A1012K, A1012K II, A1013K, A1014ST, A1101S, A3011SA, A3012CA, A3013T, A3014S, A3015SA, A5301T, A5302CA, C3003P, C1001SA, C1002S, C3001H, C3002K, C407H, C408P, C409CA, C410T, C411ST, C412SA, C413S, C414K, C415T, C451H, C5001T, G'zOne C452CA, C304SA, C402DE, C403ST, C405SA, C406S, DIVA C404S

キャリア	メーカー	製品型番
docomo	NEC	N906iμ, N906iL, N906i, N905iμ, N905i, N904i, N903i, N902iS, N706iII, N706ie, N706i, N705iμ, N705i, N704iμ, N703iμ, N703iD, N702iD, N-09A, N-08B, N-08A, N-07B, N-07A, N-06B, N-06A, N-05C, N-05B, N-05A, N-04B, N-04A, N-03D, N-03C, N-03B, N-03A, N-02D, N-02C, N-02B, N-02A, N-01G, N-01F, N-01E, N-01C, N-01B, N-01A
	パナソニック（松下）	P906i, P905iTV, P905i, P904i, P903iX, P903iTV, P903i, P902iS, P901iTV, P706iμ, P706ie, P705iμ, P705iCL, P705i, P704iμ, P704i, P703iμ, P703i, P702iD, P702i, P-10A, P-09A, P-08A, P-07B, P-07A, P-06C, P-06B, P-06A, P-05C, P-05B, P-05A, P-04C, P-04B, P-04A, P-03D, P-03C, P-03B, P-03A, P-02C, P-02B, P-02A, P-01H, P-01G, P-01F, P-01E, P-01C, P-01B, P-01A
	三菱	D905i, D904i, D705iμ, D705i, D704i
	富士通	F906i, F905i, F904i, F903iX, F903i, F884iES, F884i, F883iS, F883iESS, F883iES, F883i, F882iES, F801i, F706i, F705i, F704i, F703i, F1100, F-11C, F-10C, F-10B, F-10A, F-09C, F-09B, F-09A, F-08F, F-08C, F-08B, F-08A, F-07F, F-07B, F-07A, F-06D, F-06B, F-06A, F-05C, F-05B, F-05A, F-04D, F-04C, F-04B, F-04A, F-03C, F-03B, F-03A, F-02D, F-02C, F-02B, F-02A, F-01G, F-01E, F-01C, F-01B, F-01A
	ソニー	S0906i, S0905iCS, S0905i, S0903iTV, S0903i, S0902iWP+, S0902i, S0706i, S0705i, S0704i, S0703i, S0702i
	シャープ	SH906iTV, SH906i, SH905iTV, SH905i, SH904i, SH903iTV, SH903i, SH902iSL, SH902iS, SH706iw, SH706ie, SH706i, SH705iII, SH705i, SH704i, SH703i, SH702iS, SH702iD, SH-11C, SH-10C, SH-09B, SH-08B, SH-08A, SH-07F, SH-07B, SH-07A, SH-06C, SH-06B, SH-06A, SH-05D, SH-05C, SH-05B, SH-05A, SH-04C, SH-04B, SH-04A, SH-03E, SH-03D, SH-03B, SH-03A, SH-02C, SH-02B, SH-02A, SH-01C, SH-01B, SH-01A
	サンヨー	SA800i, SA702i
ソフトバンク	カシオ	CA-01C
	LG電子	L852i, L706ie, L705iX, L705i, L704i, L602i, L601i, L600i, L-10C, L-06A, L-04B, L-03B, L-03A, L-02B, L-01C, L-01B, L-01A
	NEC	940N, 931N, 930N, 841N, 840N, 831N, 830N, 821N, 820N, 804N, 741N, 740N, 703N, 001N
	パナソニック（松下）	942P, 941P, 940P, 931P, 930P, 921P, 920P, 842P, 841P, 840P for Biz, 840P, 832P, 831P, 830P, 824P, 823P, 822P, 821P, 820P, 810P, 706P, 705Px, 705P, 401PM, 301P, 103P, 002P for Biz, 002P, 001P
	シャープ	DM008SH, DM007SH, DM006SH, DM005SH, DM004SH, DM003SH, DM002SH, DM001SH, 945SH, 944SH, 943SH, 942SH, 941SH, 940SH, 936SH, 935SH, 934SH, 933SH, 932SH, 931SH, 930SH, 923SH, 922SH, 921SH, 920SH YK, 920SH, 913SH, 912SH, 911SH, 910SH, 905SH, 843SH, 842SH, 841SHs, 841SH, 840SH, 832SHs, 832SH, 831SHs, 831SH, 830SHs, 830SH for Biz, 830SH, 825SH, 824SH, 823SH, 822SH, 821SH, 820SH, 816SH, 815SH, 814SH, 813SH for Biz, 813SH, 812SHsII, 812SHs, 812SH, 811SH, 810SH, 804SH, 705SH, 301SH, 202SH, 109SH, 108SH, 105SH, 008SH, 004SH, 002SH, 001SH
	東芝	921T, 920T, 912T, 911T+0 ROKR, 911T, 910T, 904T, 903T, 832T, 831T, 830T, 824T, 823T, 822T, 821T, 820T, 815T, 814T, 813T, 812T, 811T, 810T, 705T
	カシオ	930CA, 830CA
	サムスン	941SC, 940SC, 931SC, 930SC, 840SC, 740SC, 731SC, 001SC
	ZTE	840Z

※このほか、携帯電話の電池パックが取り外し可能なりチウム電池であれば、上記キャリア・機種以外でも充電できることがあります。
充電可否を確認しますので、よろしければ会場にお持ち込みください。